

Fuji Drive Program Setting

S.no	Parameter	Setting	Remarks
1	H03	1	Reset (To load default values) (By pressing STOP&Up keys together)
2	F01	1	
3	F02	1	
4	F03	50HZ	
5	F04	50HZ	
6	F05	420V	voltage
7	F06	420V	voltage
8	F07	2.8SEC	Acceleration
9	F08	1.8SEC	Deceleration
10	F10	1	
11	F11	MOTOR AMPS	
12	F12	1	Centimeter
13	F14	1	
14	F15	50HZ	
15	F16	0HZ	
16	F20	2HZ	
17	F21	45%	Breaking level
18	F22	1SEC	
19	F26	9	Noice motor frequency
20	F37	2	
21	F42	1	Torque
22	E04	3	
23	E27	99	Time
24	C05	9HZ	Low speed
25	C06	25HZ	Medium speed
26	C08	50HZ	High speed
27	C12	5HZ	
28	P03	MOTOR AMPS	
29	H07	1	
30	F00	1=To Lock 0=Unlock	To lock parameters (By pressing STOP&UP keys together)

NOTE:

ARD SETTING

F14=5 -----ARD SOME SITES ONLY NOT FOR ALL

3.7KWDRIVE MOTOR AMPS-----9AMPS
 5.5KWDRIVE MOTOR AMPS-----13AMPS
 7.5KW DRIVE MOTOR AMPS-----18AMPS
 11KW DRIVE MOTOR AMPS-----24AMPS

DOOR DRIVE SETTING

E01 0
 E02 1
 E03 2
 F02 1

